it all starts with a

vision

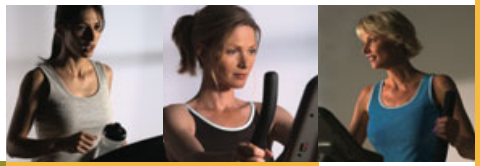

VISION FITNESS®

500 South CP Avenue • P.O. Box 280 • Lake Mills, WI 53551
toll free 800.335.4348 • phone 920.648.4090 • fax 920.648.3373
www.visionfitness.com

©2006 Vision Fitness. All Rights Reserved. 8.06
AG18.41PRD
REV3

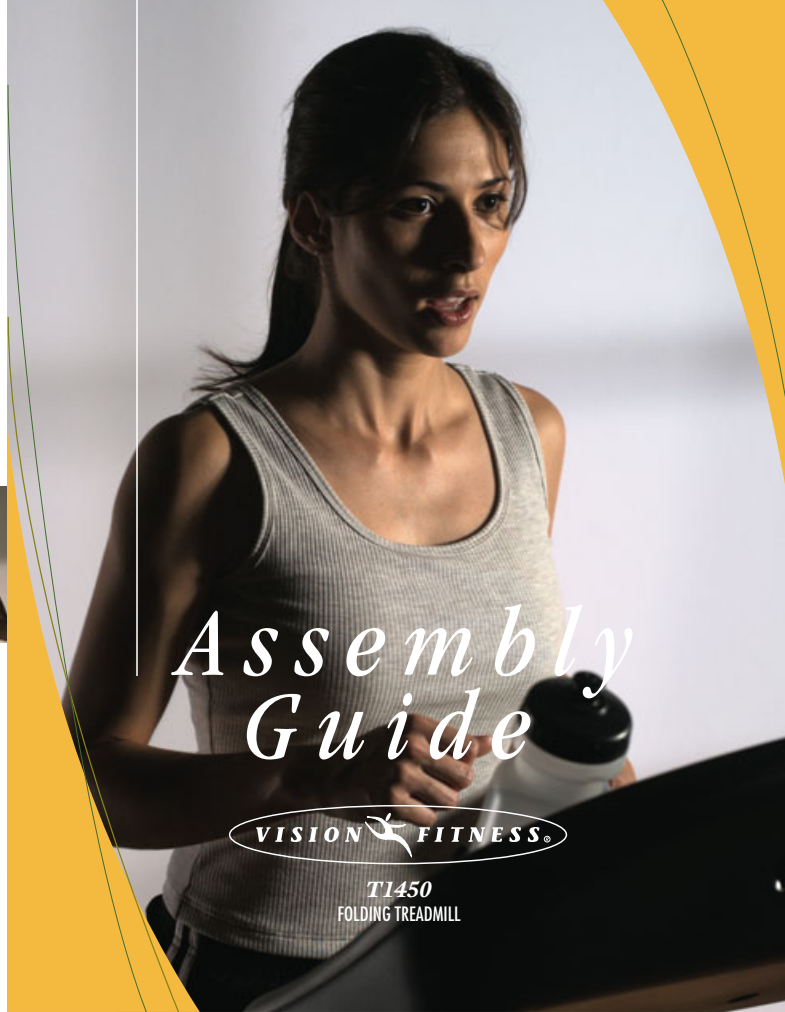

Assembly Guide

VISION FITNESS®

T1450
FOLDING TREADMILL

TOOLS, HARDWARE, & PARTS INCLUDED

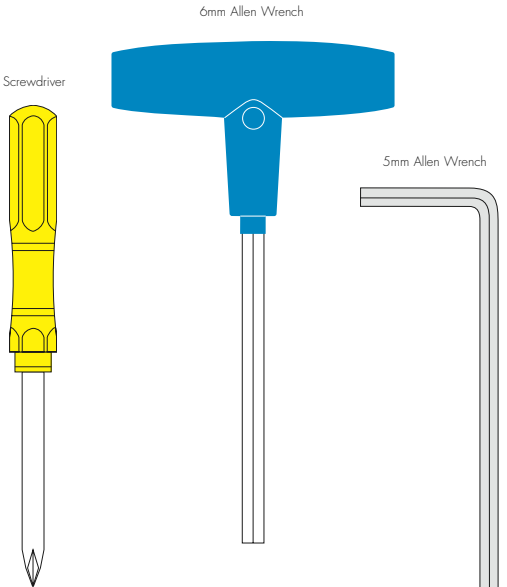

PARTS BOX

Water Bottle, Qty: 1
Safety Magnet Key, Qty: 1
Color-coded Hardware Bags

HARDWARE INCLUDED

ORANGE BAG



M8 x 15L Bolt
Quantity: 8

BLUE BAG



M8 x 15L Bolt
Quantity: 6

PINK BAG

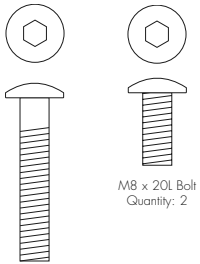

M8 x 45L Bolt
Quantity: 2

M8 x 20L Bolt
Quantity: 2

STEP 4

M4 x 12L Panhead Screw
Quantity: 4
(Installed in Motor Cover)

Assembly Guide

T1450
FOLDING TREADMILL

To avoid possible damage to this Folding Treadmill, please follow these assembly steps in the correct order. Before proceeding though, find your new Folding Treadmill's 2 serial numbers, located on the underside of the main frame and on the bottom of the console, and enter here:

Frame Serial Number _____ Console Serial Number _____

Refer to these numbers when calling for service, and also enter these serial numbers on your Warranty Card and in your own records. Be sure to read your Owner's Guide before using your new Folding Treadmill.
If any parts, hardware or tools are missing, please call 1.800.335.4348, Extension 12

NOTE: It is recommended that you apply grease to the threads of each bolt as you assemble your Folding Treadmill, to prevent loosening and noise. Also, during each assembly step, ensure that ALL nuts and bolts are in place and partially threaded in before completely tightening any ONE bolt.

STEP 1 ORANGE BAG

- Remove the motor cover.
- Insert the left console mast into the console mast bracket and secure 4 bolts (M8 x 15L) in the holes of the console mast tube. Do not fully tighten the bolts.
- Repeat on the right side.

STEP 2 BLUE BAG

- Slide the console data cables down the right console mast using the wire tie as a guide. Make sure the data cables go through the notch at the front of the console mast tube.
- Attach the console onto the upper console mast brackets by first securing the bolt (M8 x 15L) nearest the handlebar on the right and left side. Secure the remaining four bolts (M8 x 15L).
- Fully tighten all 14 bolts; on the lower console mast brackets and the upper console mast brackets.

STEP 3 PINK BAG

- Insert right handlebar into the console mast bracket using two bolts (M8 x 20L in the rear hole and M8 x 45L in the front hole).
- Repeat on the left side.

STEP 4 DATA CABLES

- Slide data cables through the hole in the motor cover from the outside of the motor cover to the inside of the motor cover.
- Plug the small data cable into the small plug connection on the lower control board. Plug the large data cable into the large plug connection on the lower control board. Push the remaining data cable into the console mast. ***NOTE:*** Make sure the protective plastic is going through the hole in the motor cover and the hole in the console mast.
- Install the motor cover and secure using 4 screws (M4 x 12L).

STEP 5 BELT TENSION

- If the running belt slips when used, use the supplied 6mm Allen wrench to turn the left and right tension bolts clockwise 1/4-turn at a time until the belt no longer slips.
- Run the treadmill at 2.0 mph. If the running belt is too far to the *right* side, use the supplied 6mm Allen wrench to turn the *right* tension bolt *clockwise* 1/4-turn at a time until the belt remains centered during use.If the running belt is too far to the *left* side, turn the *left* tension bolt clockwise 1/4-turn at a time until the belt remains centered during use.